 
 


 
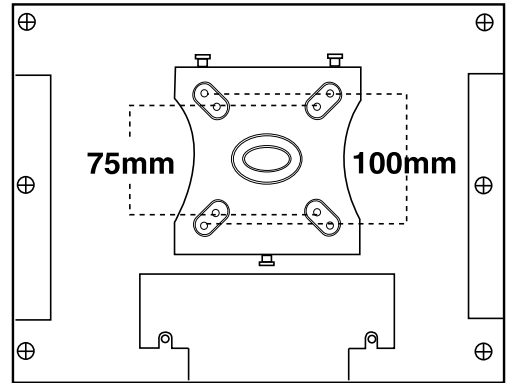 


 
 
 
Installation Instructions Model No. 89841

If any parts are missing or faulty, telephone the Customer Service Helpline on 1 - 800 601 8450 for a replacement.


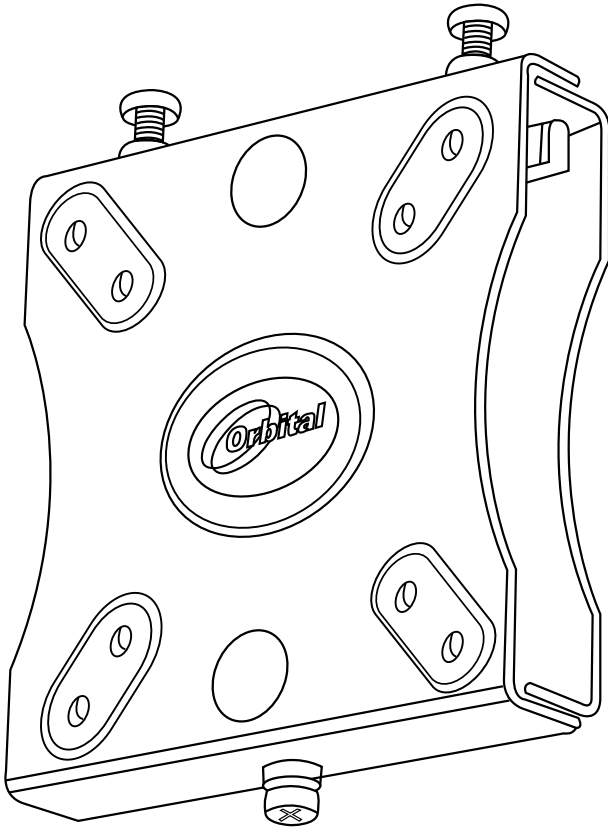



Back View of LCD TV

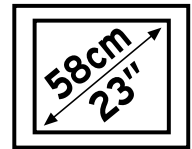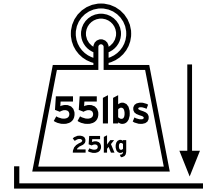 


 x 3 (for unit assembly)	 x 4 (x 3 sizes) (to mount front plate to TV back)	 x 8 Spacers (Optional for irregular fitting)
---	---	---

Fixing Method

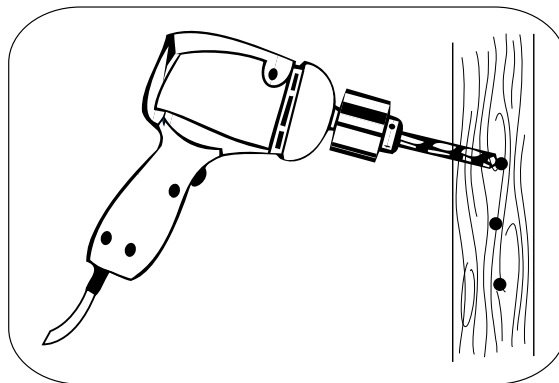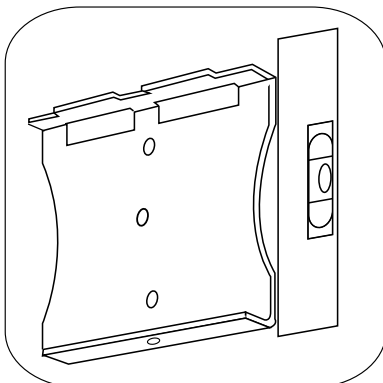

 
 
 
 
 
 **3 x 2 1/2" (63mm) No.12**

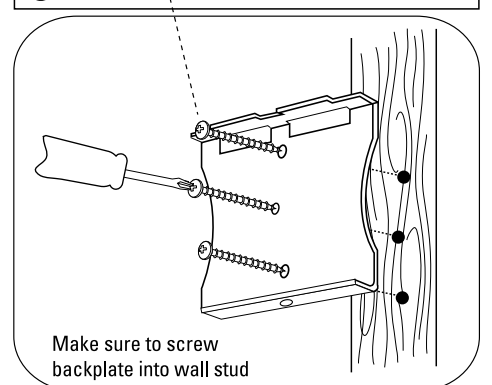

Make sure to screw backplate into wall stud




Fixing Method

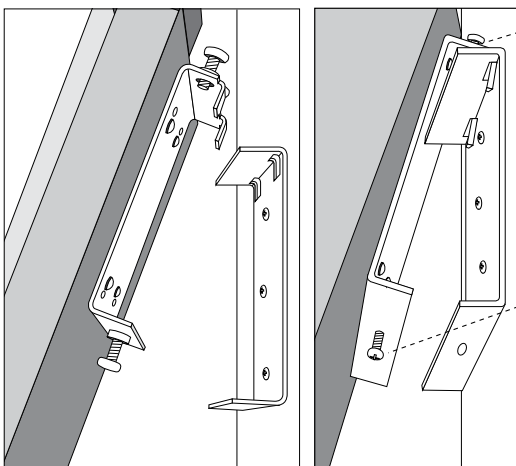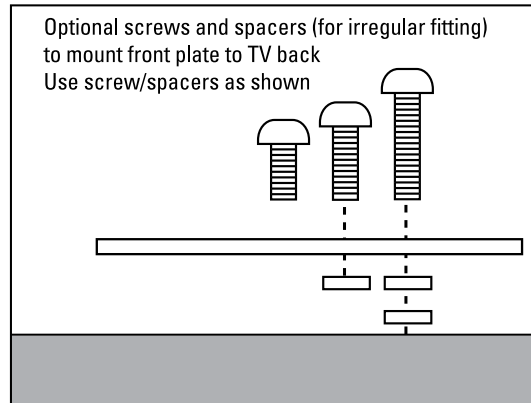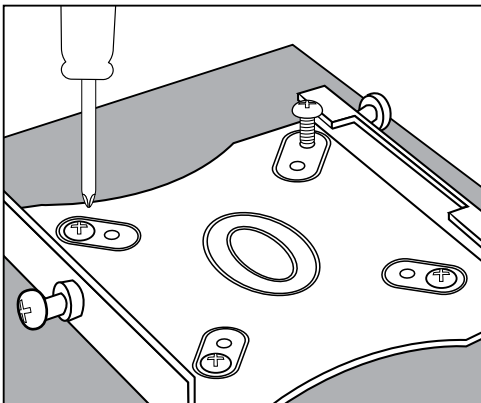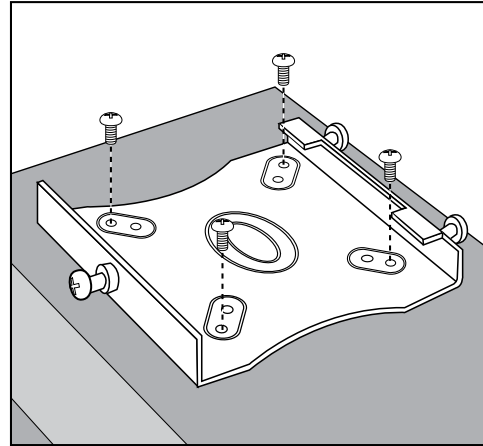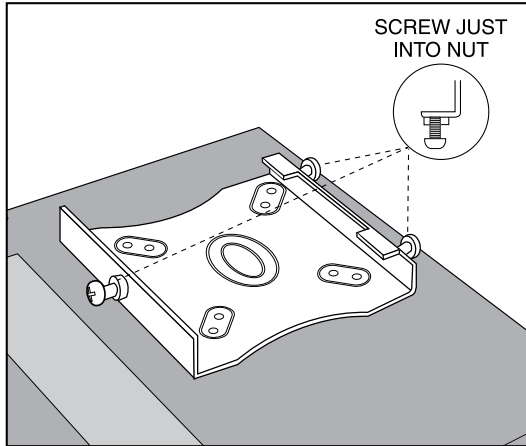

Alter top two screws after slotting in position to adjust screen level if required

Bottom screw must be screwed fully up when in position, to stop forward movement

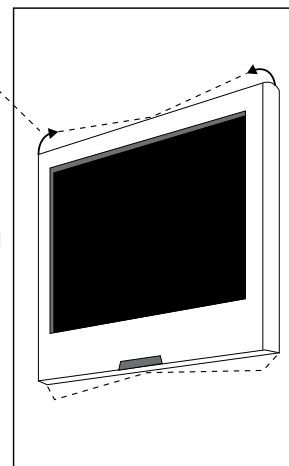

Orbital Holdings Inc., 7627 Cherry Avenue, Fontana, CA 92336

Customer Service: 1 - 800 601 8450

Fax: 1 - 909 823 9559

www.orbitalholdings.com

Part No. 461742